

MHS-PM5/PM5K

Mobile HD Snap Camera/Instruction Manual

Appareil photo numérique Snap HD mobile/Mode d'emploi

Cámara fotográfica digital HD (Alta Definición) compacta/Manual de instrucciones



bloggie™

© 2010 Sony Corporation Printed in China



4172852110

English

Checking the accessories supplied

- Rechargeable battery pack NP-BK1 (1)
- AV connecting cable (1) (Sony Corporation 1-823-156-)
- USB connection support cable (1) (Sony Corporation 1-836-378-)
- 360 Video Lens VCL-BPP1 (1) (Only for MHS-PM5K)
- 360 Video Lens Pouch (1) (Only for MHS-PM5K)
- Memory card (“Memory Stick PRO Duo” media 4 GB*/Only for MHS-PM5K)(1)
- Wrist strap (1)
- CD-ROM (1)
 - “PMB” (software, including “PMB Help”)
 - bloggie Handbook (PDF)
- Instruction Manual
- Important Notice

* When measuring media capacity, 1 GB equals 1 billion bytes, a portion of which is used for system management and/or application files. The capacity that a user can use is approximately 3.6 GB.

Specifications


- Effective Pixel: Approx. 5.0 Megapixels (still images), Approx. 2.0 Megapixels (1080 30P)
- Format
 - Still: JPEG Exif ver 2.21, DCF compliant
 - Movie: MPEG4-AVC/H.264 (.MP4) compliant
- Power
 - Rechargeable Battery Pack NP-BK1, 3.6V
 - Power Consumption 1.9 W [1280 × 720 30P]
- Operating Temperature
 - 0°C - 40°C (32°F - 104°F)

Getting further detailed information from the “bloggie Handbook” on the supplied CD-ROM

Sufficient information on the basic operations is described below. If you want further detailed information, however, refer to the “bloggie Handbook” on supplied CD-ROM. The “bloggie Handbook” is a user guide designed to be read on a computer screen.

A

Charging the battery Charge de la batterie Carga de la batería

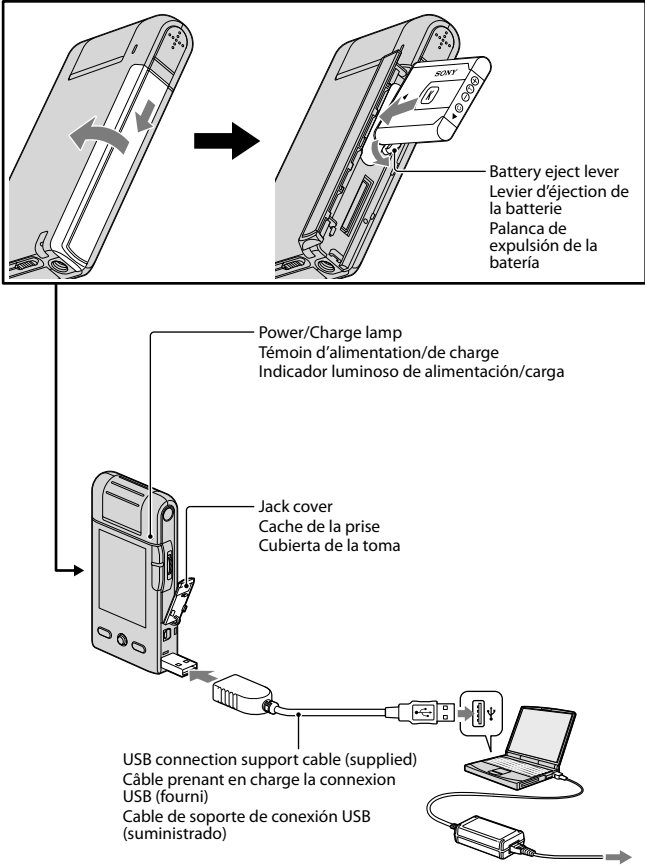

Getting started

1 Charging the battery pack (See illustration A).

- ① Open the battery/memory card cover.
- ② Press and hold the battery eject lever and insert the battery pack.
- ③ Close the battery/memory card cover.
- ④ Connect the camera to the computer with the USB connection support cable.

The Power/Charge lamp lights up in orange while charging the battery, and turns off when charging is finished.
The time required to charge the battery fully is approx. 300 minutes.
We recommend that you connect the AC Adaptor to the computer before you start charging the battery pack.

Approximate recording/playback time (min.)

Continuous recording time	95
Typical recording time	60
Playback time	130

- The image size: [1280 × 720 30P]
- Typical recording time shows the time when you repeat recording start/stop, turning the power on/off and zooming.
- Recording and playing back condition:
 - When using the camera at 25°C (77°F).
 - The battery is fully charged.
- Do not use a deformed or damaged battery pack.

2 Inserting the memory card (See illustration B).


- ① Open the battery/memory card cover.
- ② Insert the memory card all the way in as shown in the illustration until it clicks.
- ③ Close the battery/memory card cover.

3 Turning the camera on/setting the language and clock (See illustration C).

- ① Rotate the lens portion to turn the camera on.
The Power/Charge lamp lights up in green.
- ② Rotate the camera 90 degrees (hold it horizontally).
- ③ Set the language and clock using the multi-selector.


B

Inserting the memory card Insertion de la carte mémoire Inserción de la tarjeta de memoria

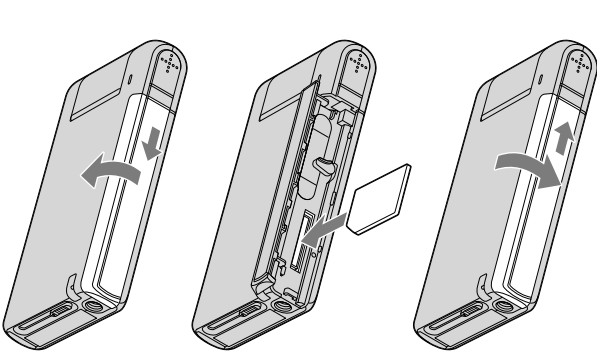

C

 Turning the power on Mise sous tension Encender la alimentación

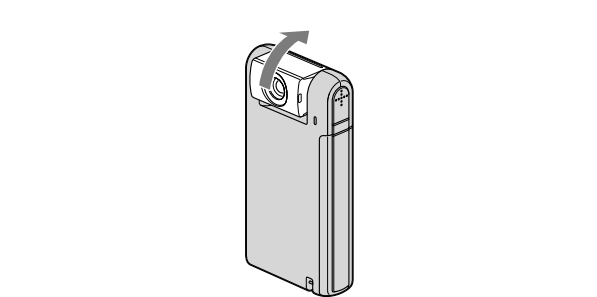

Basic Operations

Shooting images (See illustration D).

- When shooting still images:
Press the (Photo) button.
- When shooting movies:
Press the (Movie) button.
To stop shooting movies, press the (Movie) button again.

Viewing images (See illustration D).

- ① Press (Play) button.
Index screen appears. Rotate the camera 90 degrees (hold it horizontally), then view the desired image.
- ② Select the image you want to play back with the multi-selector tilt to / / / .
- ③ Press the multi-selector to display a still image.

- When playing back movies:
Press the multi-selector to play back a movie.
Tilt to to fast forward, to rewind. (Press the multi-selector to return to normal playback.)
Tilt to to display the volume control screen, then adjust the volume with .

Deleting images (See illustration D).

- ① Press the (Play) button and select an image you want to delete.
- ② Press the MENU button and select (Delete) with / .
- ③ Select [This Image] with / and press the multi-selector.
- ④ Select [OK] with the multi-selector tilted to , and press the multi-selector.

Enjoying with your computer


Operating the “PMB Portable”

This camera has an application “PMB Portable”. You can use this application to upload images easily to a blog or other media service.
For details on “PMB Portable”, see the “PMB Portable” help.

- ① Turn the power of the camera on, then connect the camera and a computer with a USB connection support cable. And then Autoplay Wizard appears. Click [×] to close the AutoPlay Wizard for any unnecessary drives.

D

Identifying parts Identification des pièces Identificación de las partes

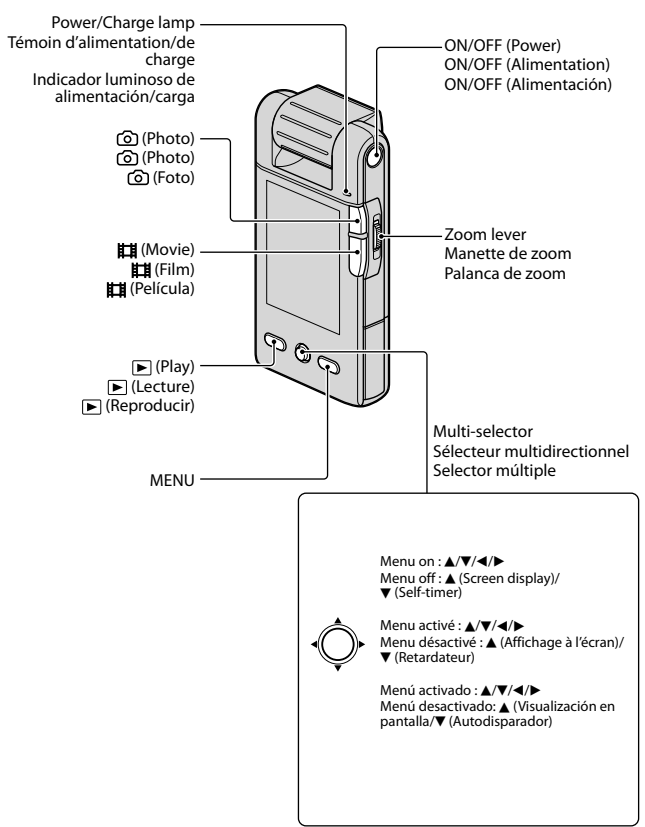

- If the desired AutoPlay Wizard does not appear, click [Computer] (in Windows XP, [My Computer]) → [PMBPORTABLE], then double-click [PMBP_Win.exe].
- ② Click [PMB Protoble] (in Windows XP, [PMB Portable] → [OK]).
The Language Selection screen appears.
 - ③ After selecting the desired language, the Region Selection screen appears.
 - ④ Select the appropriate [Region] and [Country/Area], and then click [OK]. The User Agreement screen appears.
 - ⑤ Read the agreement carefully. If you accept the terms of the agreement, click [I Agree]. “PMB Portable” starts up.

Trademarks

- “bloggie” is a trademark of Sony Corporation.
- “Memory Stick”, “”, “Memory Stick Duo”, “**MEMORY STICK Duo**”, “Memory Stick PRO Duo”, “**MEMORY STICK PRO Duo**”, “Memory Stick PRO-HG Duo”, “**MEMORY STICK PRO-HG Duo**”, “MagicGate”, “**MAGIC GATE**”, “MagicGate Memory Stick” and “MagicGate Memory Stick Duo” are trademarks or registered trademarks of Sony Corporation.
- 360 Video is a trademark of Sony Corporation.
- Microsoft, Windows, Windows Media, Windows Vista, and DirectX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- SDHC logo is a trademark.
- In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the TM or ® marks are not used in all cases in this manual.

